# INT&RIOR SYSTEMS
Guiding Design • Informed Interiors
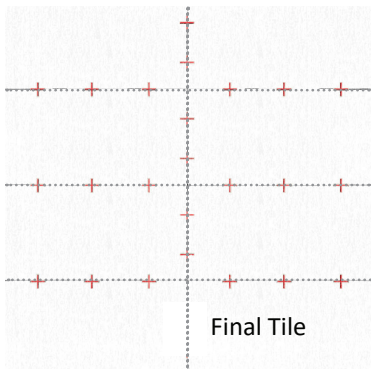
www.tris.co.nz
0800 666 556
info@tris.co.nz

# PHONIC
## ACOUSTIC CEILING TILES
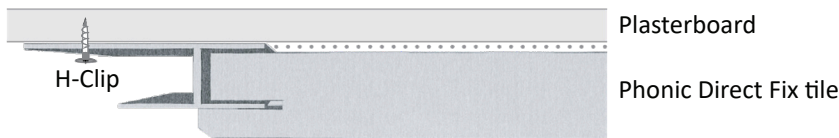
# INSTALLATION GUIDE
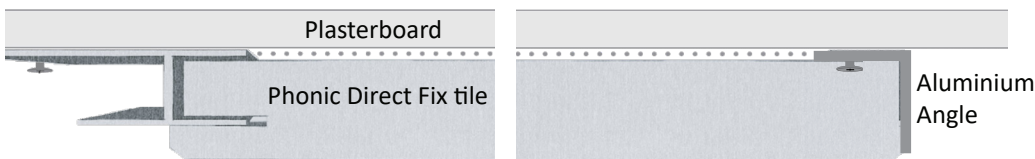# PHONIC DIRECT FIX FREE-FLOATING

## STEP ONE

Final Tile

## STEP TWO

## STEP THREE

Plasterboard

H-Clip

Phonic Direct Fix tile

## STEP FOUR

Plasterboard

Phonic Direct Fix tile

Aluminium Angle

## ALTERNATIVE

29mm

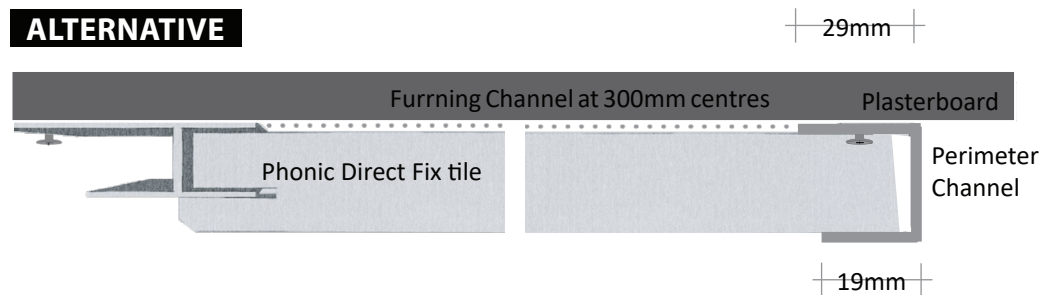Furrning Channel at 300mm centres

Plasterboard

Phonic Direct Fix tile

Perimeter Channel

19mm

## STEP ONE
Determine tile configuration and identify fixing points for the H Clips on the ceiling. The layout is dependent on the desired configuration. Leave the edges free.

Please note that whatever the configuration, the final tile will have a maximum of one edge with H clips.

## STEP TWO
Install an aluminium angle along the edges to create a frame

## STEP THREE
Apply adhesive to the back of the tiles and place the tiles into the aluminium frame. Complete one row at a time and use H Clips to mechnically fix the edges as identified in step 1. All tiles with edges on the perimeter should be propped while the adhesive dries.

## STEP FOUR
Apply adhesive and slide the final tile into place. Prop until adhesive is dry.